


# CONTROL LOCATION

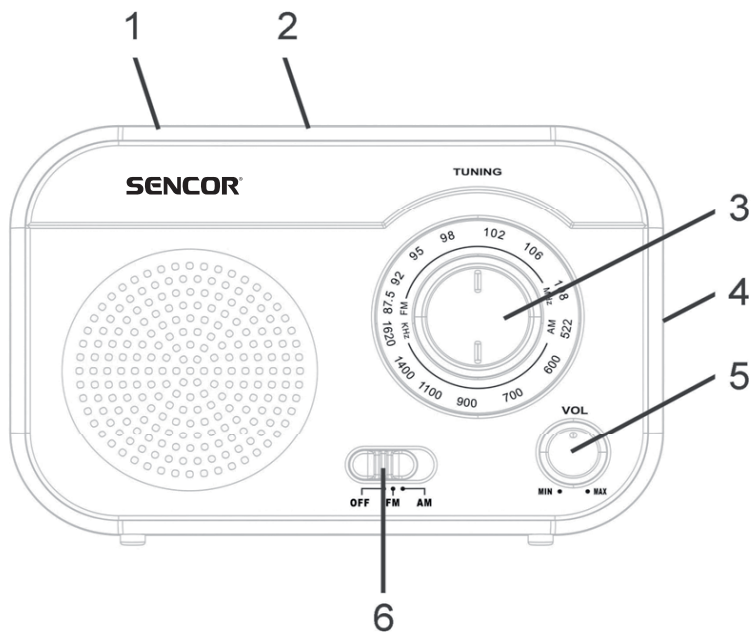

1. ROD ANTENNA
2. CARRYING HANDLE
3. RADIO TUNING CONTROL
4. HEADPHONE JACK
5. VOLUME CONTROL
6. RADIO BAND SELECTOR
7. BATTERY COMPARTMENT COVER (back cabinet)
8. AC SOCKET (back cabinet)

# OPERATING INSTRUCTION

## **Battery Supply**

Open the battery compartment and insert as indicated in the compartment three Batteries, type R14, UM2 or C cells.

The battery supply is switched off when the set is connected to the mains. To change over to battery supply, pull out the plug from the MAINS socket.

## **Mains Supply**

If the set is equipped with a 110/220V selector, set this selector to the local mains voltage.

Connect the mains lead to the wall socket. The mains Supply is switched on.

To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

## **Radio**

1. Select the wave band using RADIO BAND SELECTOR.
2. Adjust the sound with the controls VOLUME.
3. You may connect stereo headphones with 3.5mm, plug to socket PHONES. The loudspeakers are then muted.
4. Tune to a radio station using TUNING knob.

## **To improve reception:**

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM/FM, SW1 & SW2, the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. Turn the set to find the best position.

## SPECIFICATIONS

FM range:	87.5 to 108 MHz
AM range:	530 to 1600 kHz
Speaker:	3 inches, 8 ohm dynamic speaker
Power Output:	1W
Battery Operate:	DC 4.5V (3 × "UM-2 / C")
Power consumption:	max. 3.5W
AC Operate:	230V ~ 50Hz
Dimensions:	210 x 139 x 53 mm
Weight:	635g

## PRECAUTIONS:

1. For AC operation, make sure the voltage is compatible. Always use the provided AC power cord; never use other AC power cord.  
For DC operation, simply insert three "UM-2 / C" batteries for unit operation.
2. Always disconnect the AC power cord from the AC power source when it is not in use or when DC power is operating.
3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.  
For instances, never place the unit in bathing areas nor around stoves and radiators.
5. If you find the unit is not working properly, please take it to your nearest services centre. Do not attempt to repair by yourself.

## WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 210 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.sencor.eu](http://www.sencor.eu)

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.