

# SENCOR®

SWK 2510WH

SWK 2511BK



**EN ■ Fast boil kettle**

# Fast boil kettle

## Important safety instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers. Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age. Children must not play with the appliance.
- Before connecting the kettle to a power socket check that the nominal voltage matches the electrical voltage in the socket.
- Connect the kettle only to a properly grounded socket.
- The kettle is designed for domestic use and similar places such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - bed and breakfast establishments.
- Do not place the kettle on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Do not place the kettle on an electric or gas stove, in the vicinity of an open flame or appliances that are sources of heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Do not wash the kettle or its base under running water and do not submerge it or its base in water or another liquid.
- Only use the kettle with the base that was supplied with it.
- Use the kettle exclusively for boiling drinking water. Do not use it to heat other liquids or foodstuffs.
- Always take the kettle off the base before filling it.
- When filling the kettle, make sure that the water level covers at least the minimum mark and also that it does not go over the maximum mark. If the kettle is overfilled, then boiling water could splash out.
- Take care not to spill water on to the connector when placing the kettle on to the base and when taking it off the base.
- Check that the lid is securely closed before starting the kettle. Do not open the lid or handle it in any way while the water is boiling.




#### **Attention:**

Incorrect use may lead to injuries.

- The surface of the heating element and kettle body remains hot after use due to residual heat. Do not touch the hot surface. Use the handle for lifting and carrying the kettle.
- Be especially careful when pouring water out of the kettle to avoid scalding by the boiling water or steam.
- Always disconnect the kettle from the power socket if you will not be using it or before moving or cleaning it.
- Clean it according to the instructions in chapter Cleaning and maintenance.
- Disconnect the kettle from the power socket by pulling on the plug, never pull on the power cord. Otherwise, this could damage the power cord or the socket.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the kettle if it has a damaged power cord.
- To avoid the danger of injury by electrical shock, do not repair the kettle yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

**A**

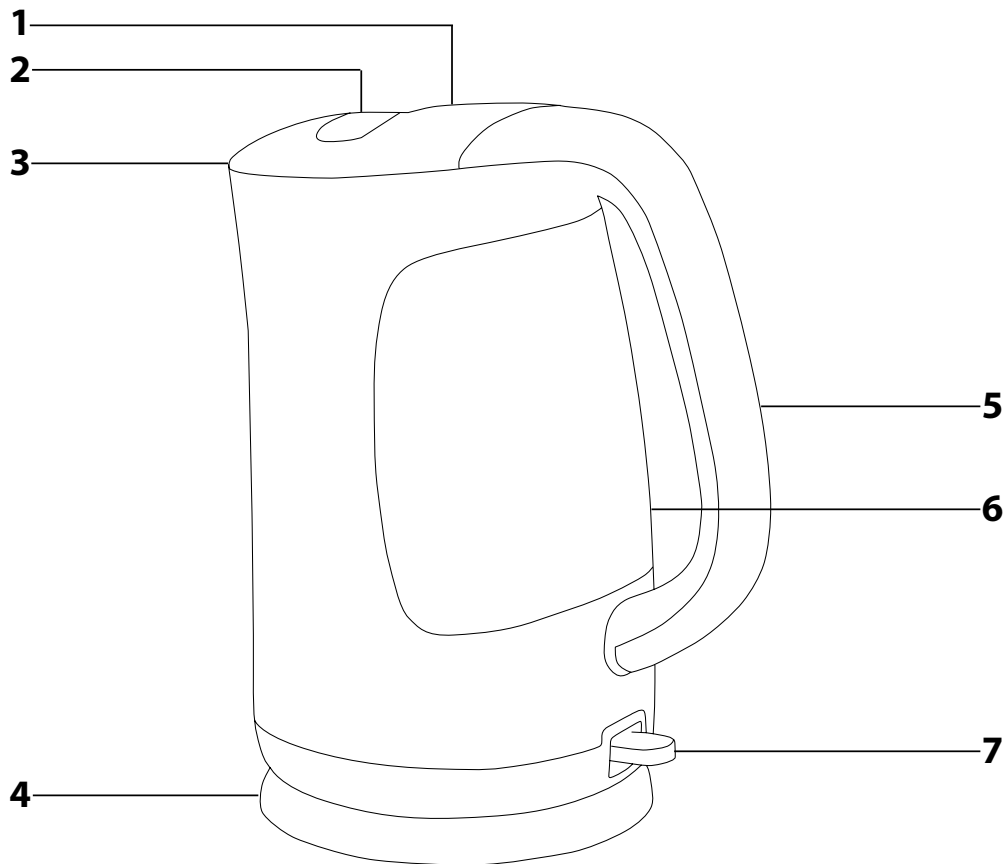

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE FAST BOIL KETTLE

- |  |  |
|--|--|
| <b>A1</b> Lid                                  | <b>A5</b> Handle   |
| <b>A2</b> Safety lid locking mechanism         | <b>A6</b> Water level mark                               |
| <b>A3</b> Spout with a removable filter inside | <b>A7</b> 0/I switch (off/on) with power indicator light |
| <b>A4</b> Base with a central connector        |  |

### BEFORE FIRST USE OF THE FAST BOIL KETTLE

1. Remove all wrapping material from the fast boil kettle and its base **A4**.
2. Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. Repeat this process 2 to 3 times.



#### Note:

To boil water in the fast boil kettle proceed according to the instructions in chapter Using the fast boil kettle.

3. Now the kettle is ready for operation.

### USING THE FAST BOIL KETTLE

1. Set the desired power cord length and push it into the groove in the base **A4**. Place the base **A4** on a stable, even and clean surface.
2. Fill the kettle with the required amount of water. You may fill it through the spout **A3** or through the opening after lifting the lid **A1**. The water level must reach at least the minimum mark (0.8l) but must not exceed the maximum mark (2.5l). After filling the kettle, check that the lid **A1** is properly closed and locked in place.



#### Attention:

Do not fill the kettle when it is placed on the base **A4**.

3. Place the kettle on the base **A4**. Insert the power plug into a power socket and set the switch **A7** to position I (On) to start the kettle. The power indicator light will be lit.



#### Attention:

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit. The switch **A7** will move to position 0 (Off) and the indicator light will turn off. The kettle can be used again after several minutes, once the heating bottom has cooled down.

4. As soon as the water boils, the kettle will turn off automatically and the power indicator light will turn off.



#### Note:

The operation of the kettle can be interrupted at any time by setting the switch **A7** to position 0 (Off).

5. Pour the boiled water into a prepared container, cup or mug. Make sure that the kettle remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark.
6. If you wish to refill the kettle, be especially careful when opening the lid **A1** to avoid scalding by the escaping steam.
7. After you finish using it, disconnect the power cord from the power socket. Empty the kettle and allow it to cool down.

### CLEANING AND MAINTENANCE

- Before cleaning it, make sure that the kettle is turned off, disconnected from the power socket, and allow it to cool down.
- To clean the external parts of the kettle, use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent. After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base **A4** use only a dry cloth.
- Never use solvents, abrasive cleaning agents, etc.

### Cleaning the filters

- The removable filter serves to capture limescale, and thereby prevents it from being poured into a cup together with the water. Regularly clean the filter under running water using a fine nylon brush or submerge it for several hours into a vinegar – water solution (recommended dilution ratio 1:2). After applying the solution, rinse the filter under clean running water.

Removing limescale deposits

- Limescale deposits inside the kettle may negatively affect its lifetime, so it is important to regularly remove it based on how frequently the kettle is used. During standard use (3 to 5 times per day), we recommend water scale deposits to be removed:
  - once per month in areas with hard and very hard water;
  - once every two to three months in areas with soft and medium hard water.
- To remove limescale deposits it is possible to use:
  - 8% white vinegar, generally available in stores. Fill the kettle with ¾ l of water and ¼ l of vinegar. Bring the solution to a boil and leave it to act in the kettle for 2 hours. Then empty the kettle and before further use, boil clean water in it four to five times.
  - citric acid. Boil 1 l of water in the kettle, into the boiled water, add 30 g of citric acid and allow the solution to act for about 30 minutes. Then empty the kettle and before further use, boil clean water in it four to five times.

TECHNICAL SPECIFICATIONS


Rated voltage range .....	220–240 V
Rated frequency .....	50/60 Hz
Rated power input .....	1 800–2 200 W
Capacity .....	2.5l

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.


In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.