


SIZE:90*140 CM

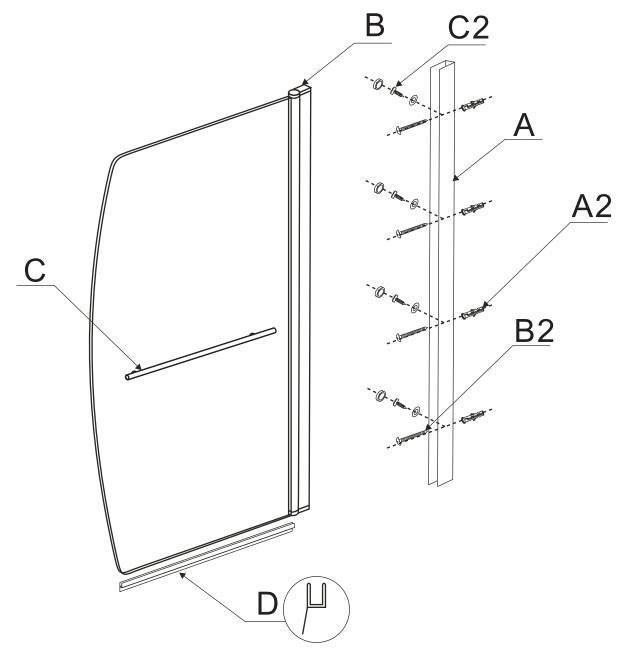

| Ref | Description | |
|-----|-------------------------------|---|
| Α | WALL PROFILE | |
| В | SIDE PANEL | 1 |
| С | HANDLE | 1 |
| D | VERTICAL SEAL FOR FIXED GLASS | 1 |


Fixing kit includes


| i ixiiig kit iiiolaacc | | | | |
|------------------------|---------------------------------|--------------|-----|--|
| Ref | Description | Illustration | Qty | |
| A2 | green expandable wall plug | 0 | 4 | |
| B2 | stainless steel screws: 4*25 | () | 4 | |
| C2 | stainless steel screws: 4*10 | () | 4 | |
| D2 | Drill beat head 3mm | | 1 | |


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start.make sure that you have the following tools to hand, plenty or space and a clean dry area for assembly.


Two people are needed. Please note: altough these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.

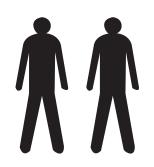


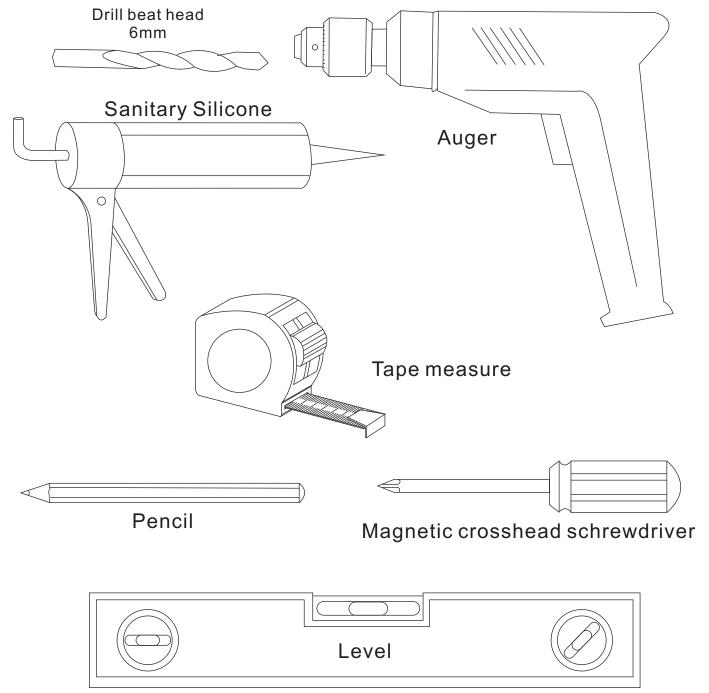

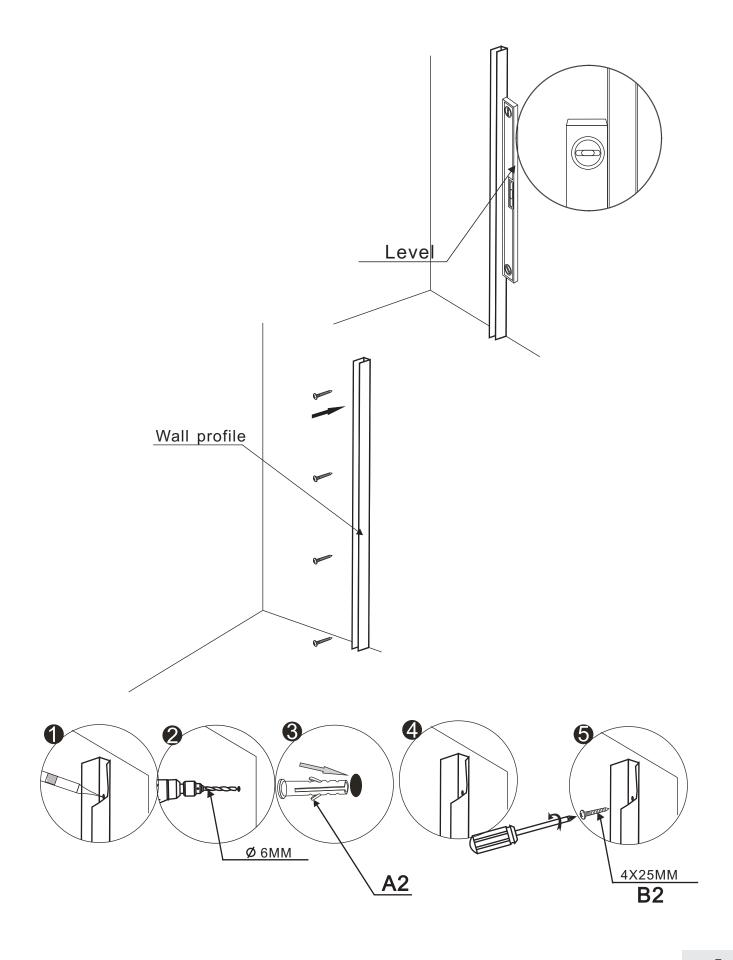

HX-112A **Installation instructions**

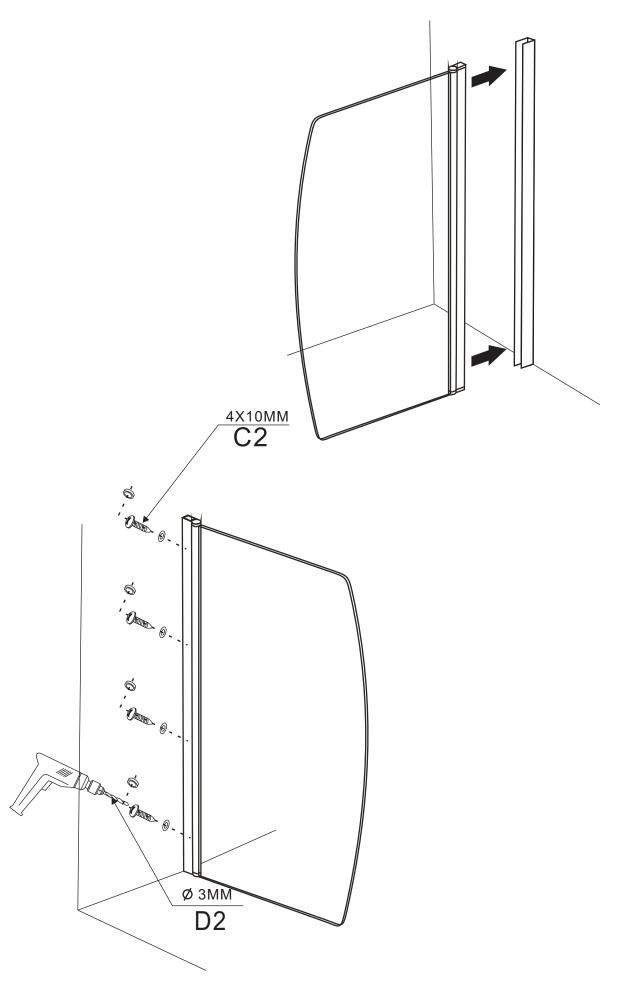

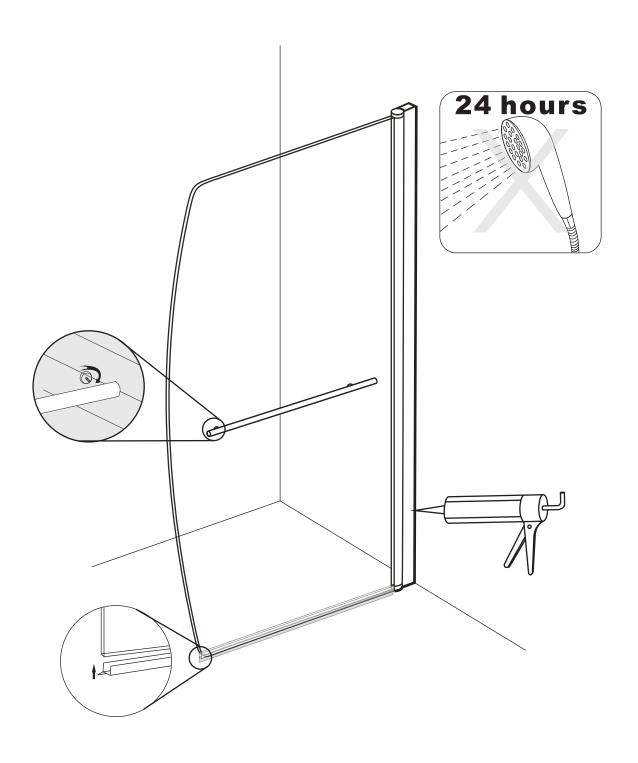

Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.