


SIZE: 120\*150 CM

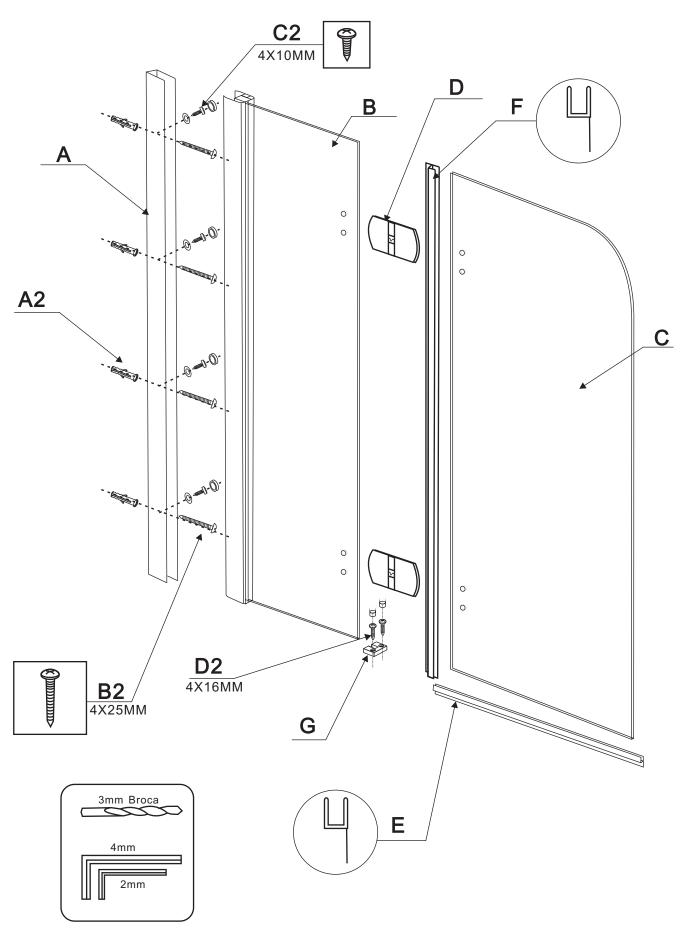



#### TOOLS REQUIRED(NOT SUPPLIED)


when you're ready to start.make sure that you have the following tools to hand, plenty or space and a clean dry area for assembly.


Two people are needed. Please note: altough these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.




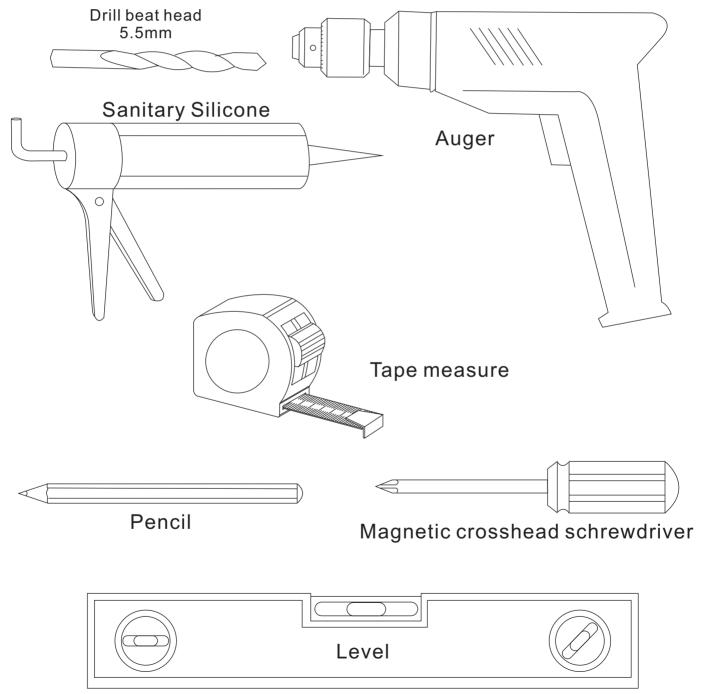


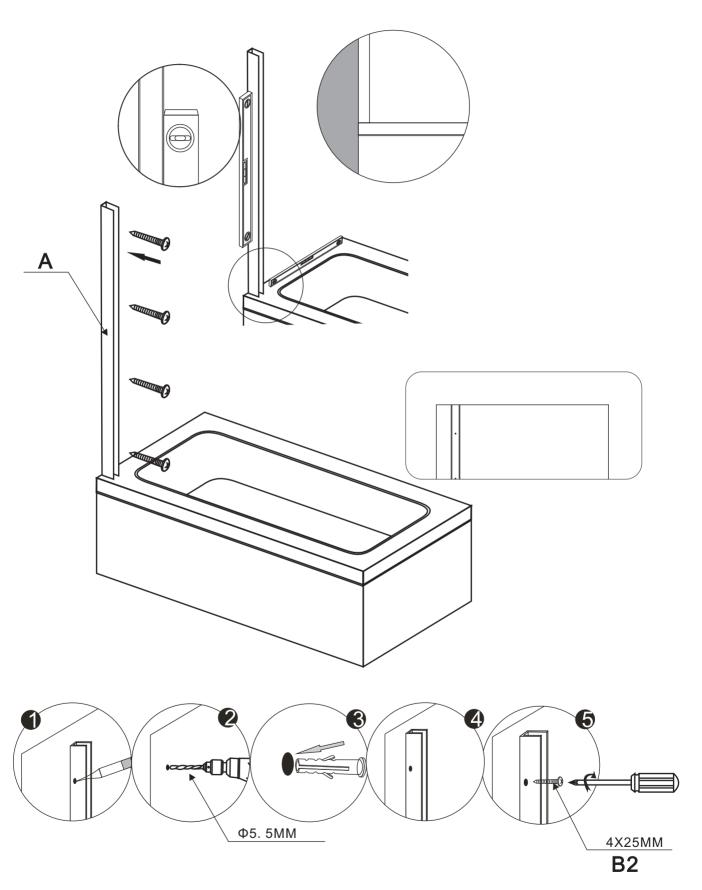

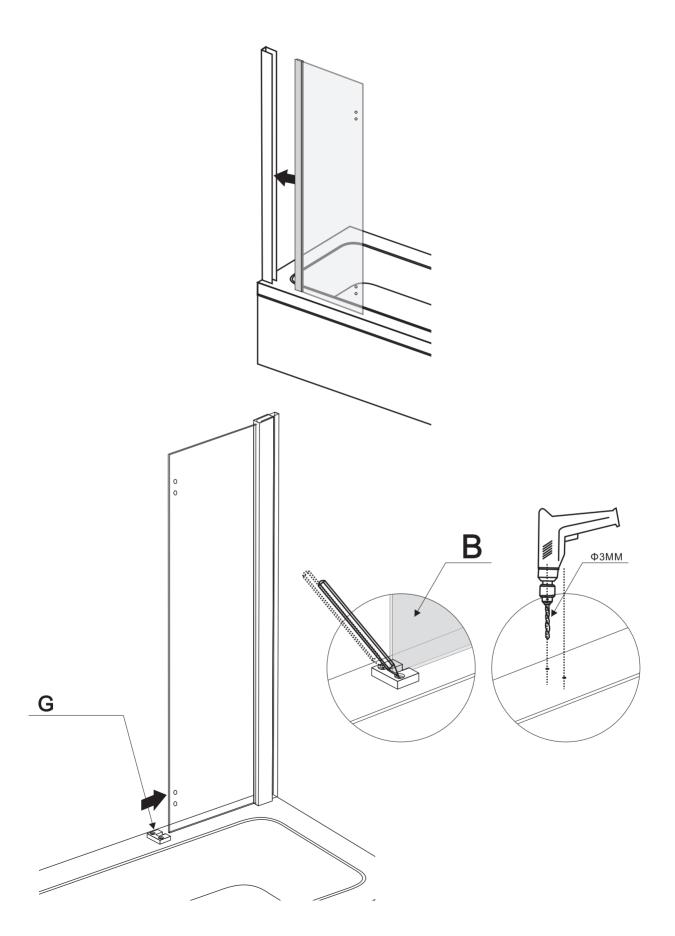

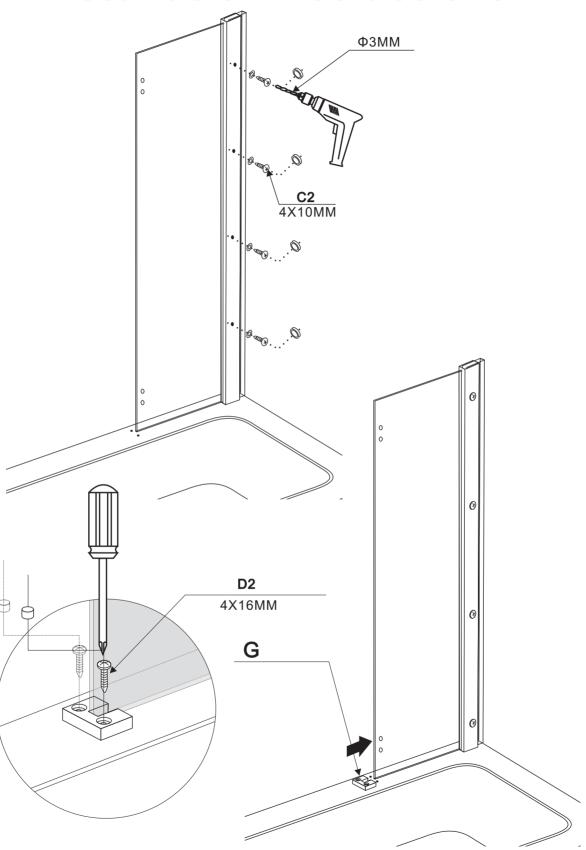

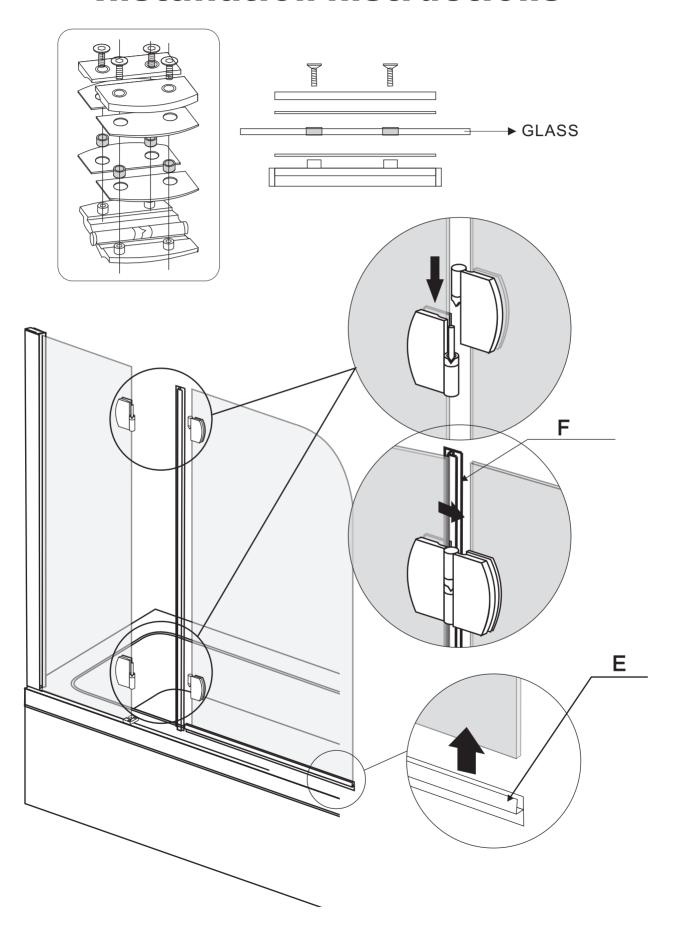

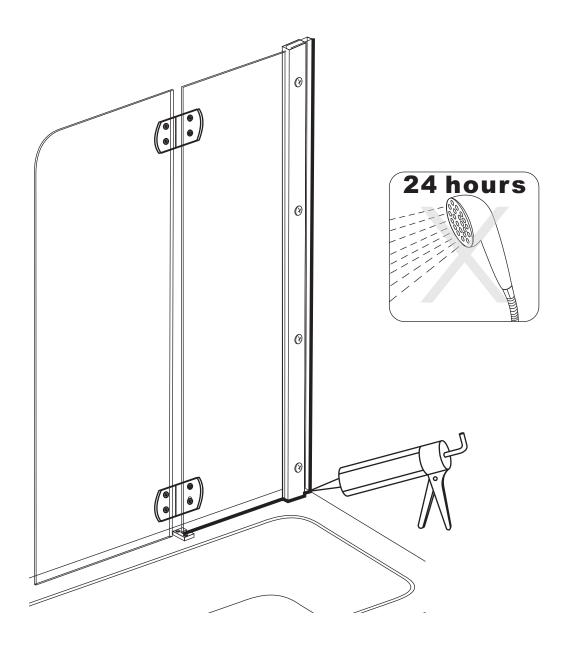

Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.