

21cm

OWLY MATTRESS




29cm

Assembly Instructions

Step 1

Lay the box in the bedroom.
Remove the mattress from the box.

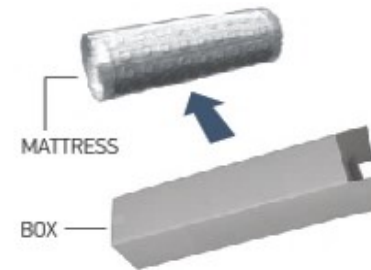

Step 2

Cut the outer bag along the seam with scissors making sure not to cut the inner clear plastic bag (do not use a knife).



Step 3

Roll out the compressed mattress on to a clean, flat surface.



Step 4

Carefully cut open the CLEAR plastic bag along the edges.
The mattress instantly begins to decompress. Remove the bag.



Step 5

Allow mattress to fully expand.
Use on any clean, smooth rigid surface such as platform bed.

Note: it might take up to 48 hours for the mattress to fully recover.

Please see care label affixed to mattress for full cleaning and care instructions.

